



**Wrangler**

**WORKWEAR**

**SIZE GUIDE**



# HOW TO MEASURE

To find the right size, compare a similar garment at home with our measurements. Measure flat across the item - never around.

**Chest width** / Measure across the chest between the lowest point of the arm seams. Multiply with 2.

**Waist width upper wear** / Measure the width at the garment's narrowest point. Multiply with 2.

**Waist width bottom wear** / Place the garment on a flat surface with the front up and measure from side to side. Multiply with 2.

**Bottom width** / Measure from side to side at the bottom of the garment. Multiply with 2.

**Center back length** / Measure the center back from the neck seam to the end of the garment.

**Sleeve length** / Lay the arm flat and measure from the shoulder point to where the cuff ends.

**Seat width** / Place the garment on a flat surface with the front up and measure from side to side at the garment's widest point. Multiply with 2.

**Thigh width** / Measure straight across the width of the leg. Multiply with 2.

**Inseam** / Measure the inside leg from the crotch to the bottom of the trousers.


**Foot width** / Measure from side to side at the bottom of the trousers. Multiply with 2.

**Length** / Measure from the highest point of the garment to the end of the garment.

**Collar length** / Open the shirt and lay the collar flat. Measure from the center of the button to the outer edge of the buttonhole.

# Men's Fleece Zip Hoodie

Art no: 8600013

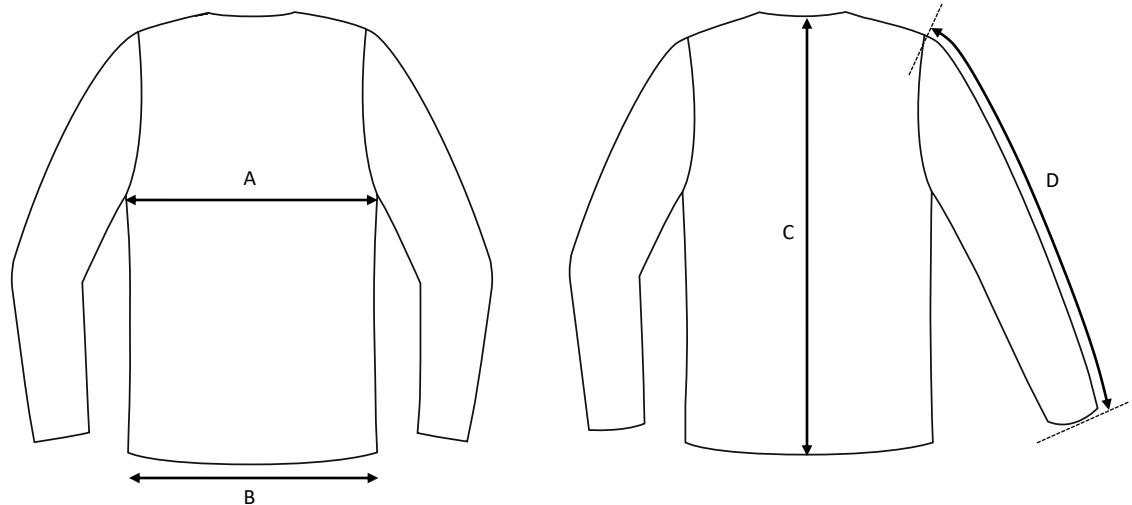

	Normal size (cm)	XXS	XS	S	M	L	XL	2XL	3XL	4XL
A	Chest width	46	49	52	55	58	61	64	67	70
B	Bottom width	42	45	48	51	54	57	60	63	66
C	Center back length	67,5	68,5	70,5	72,5	74,5	76,5	77,5	78,5	79,5
D	Sleeve length	65	66	67,5	69	70,5	72	73	74	75