



Wrangler®

WORKWEAR

SIZE GUIDE



HOW TO MEASURE

To find the right size, compare a similar garment at home with our measurements. Measure flat across the item - never around.

Chest width / Measure across the chest between the lowest point of the arm seams. Multiply with 2.

Waist width upper wear / Measure the width at the garment's narrowest point. Multiply with 2.

Waist width bottom wear / Place the garment on a flat surface with the front up and measure from side to side. Multiply with 2.

Bottom width / Measure from side to side at the bottom of the garment. Multiply with 2.

Center back length / Measure the center back from the neck seam to the end of the garment.

Sleeve length / Lay the arm flat and measure from the shoulder point to where the cuff ends.

Seat width / Place the garment on a flat surface with the front up and measure from side to side at the garment's widest point. Multiply with 2.

Thigh width / Measure straight across the width of the leg. Multiply with 2.

Inseam / Measure the inside leg from the crotch to the bottom of the trousers.


Foot width / Measure from side to side at the bottom of the trousers. Multiply with 2.

Length / Measure from the highest point of the garment to the end of the garment.

Collar length / Open the shirt and lay the collar flat. Measure from the center of the button to the outer edge of the buttonhole.

Men's Pro Sweatshirt

Art no: 8600019

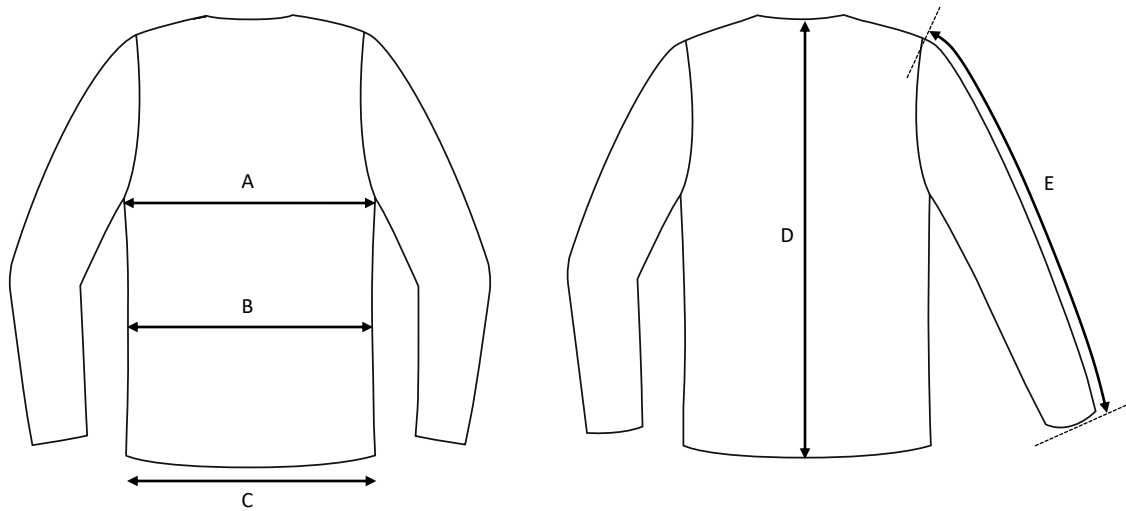

	Normal size (cm)	XXS	XS	S	M	L	XL	2XL	3XL	4XL
A	Chest width	51	54	57	60	63	66	69	72	75
B	Waist width	47	50	53	56	59	62	65	68	71
C	Bottom width	39	42	45	48	51	54	57	60	63
D	Center back length	68	69	71	73	75	77	78	79	80
E	Sleeve length	59	60	61,5	63	64,5	66	67	68	69